


ARAT Telephone mount

Car Manufacturer: NISSAN

Type: Pathfinder
Model 2000 onwards

Part No: 1258.1

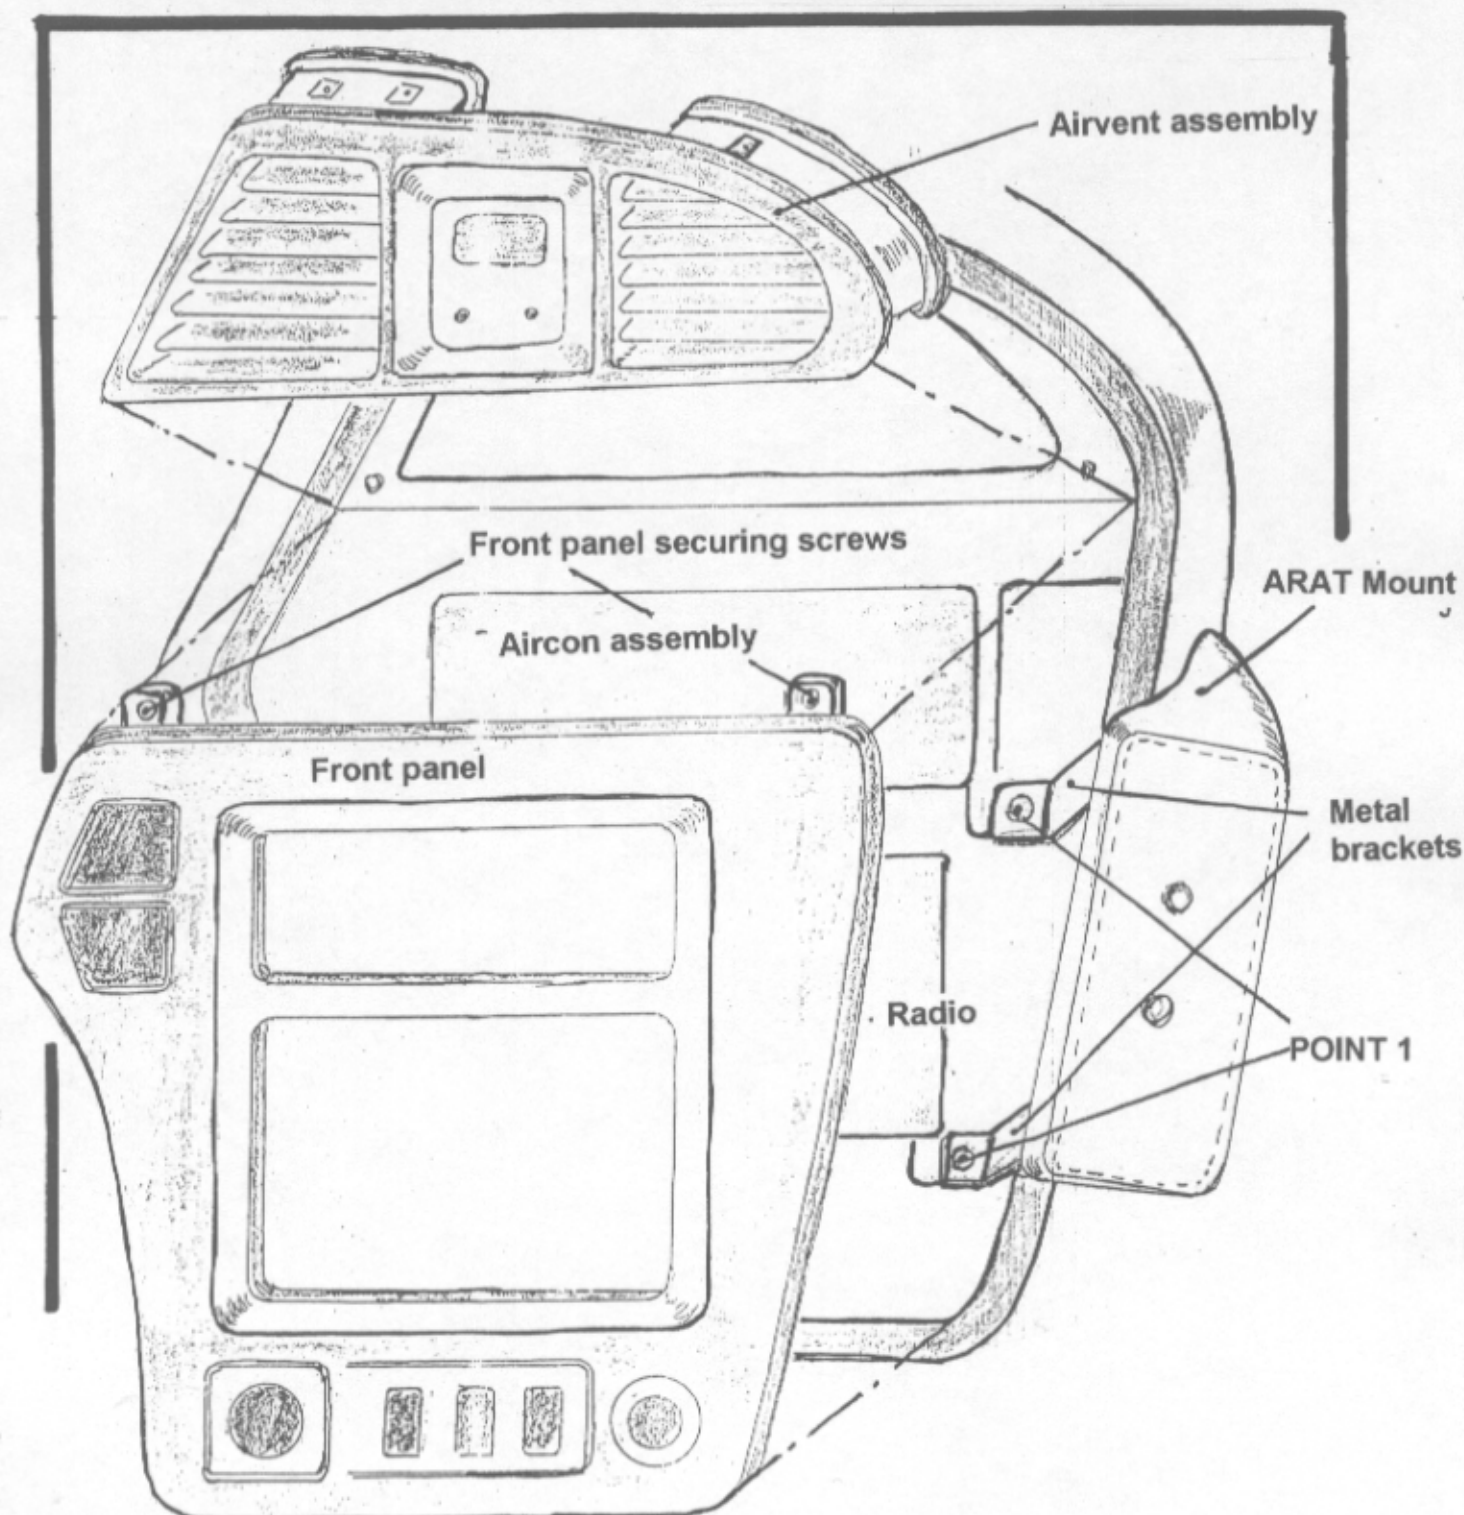

Installation instruction.

1. Remove the airvent assembly it sits on spring clips
2. Remove the panel securing screws, and remove the panel from its spring clips
3. Remove the screws at POINT 1, place the ARAT mount to the contours of the dashboard, and secure it through the metal brackets with these screws
4. Replace the front panel and airvent assembly.